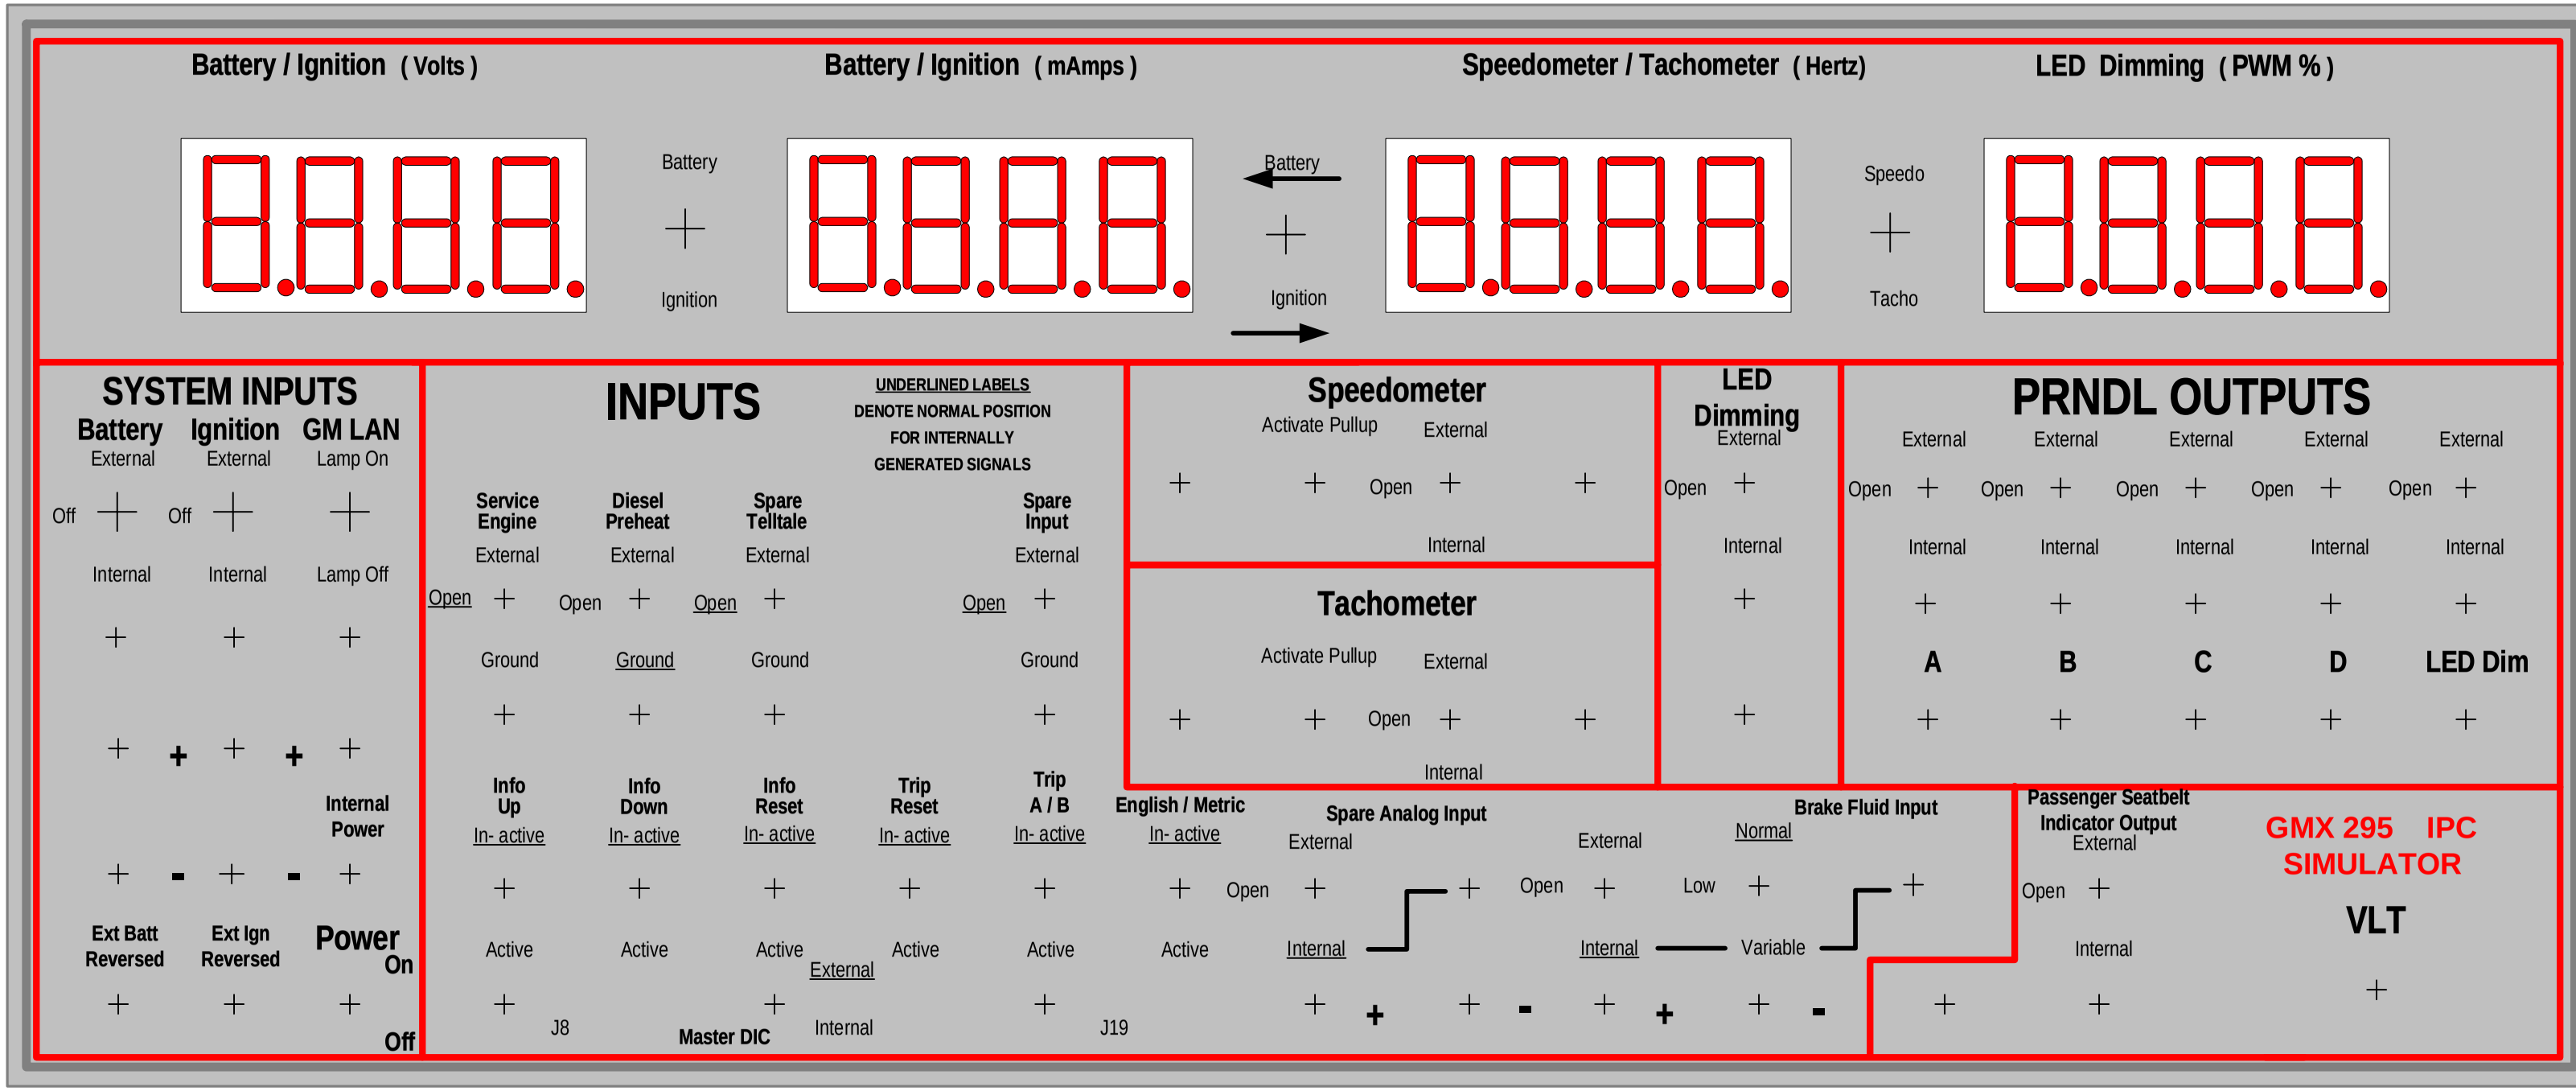
Battery / Ignition (Volts)
Battery
Ignition
Battery / Ignition (mAmps)
Battery
Ignition
Speedometer / Tachometer (Hertz)
Speedo
Tacho
LED Dimming (PWM %)
SYSTEM INPUTS
Battery
External
Off
Internal
Ignition
External
Off
Internal
GM LAN
Lamp On
Lamp Off
Internal Power
Ext Batt Reversed
Ext Ign Reversed
Power
On
Off
INPUTS
UNDERLINED LABELS DENOTE NORMAL POSITION FOR INTERNALLY GENERATED SIGNALS
Service Engine
Diesel Preheat
Spare Telltale
Spare Input
External
Open
Ground
Info Up
Info Down
Info Reset
Trip Reset
Trip A / B
English / Metric
In- active
Active
J8
Master DIC
J19
Speedometer
Activate Pullup
External
Open
Internal
Tachometer
Activate Pullup
External
Open
Internal
LED Dimming
External
Open
Internal
PRNDL OUTPUTS
External
Open
Internal
A
B
C
D
LED Dim
Spare Analog Input
External
Open
Internal
Brake Fluid Input
Normal
Low
Variable
Passenger Seatbelt Indicator Output
External
Open
Internal
GMX 295 IPC SIMULATOR
VLT